


Antenna (86.77.31)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the RH A-pillar upper trim panel. For additional information, refer to [A-Pillar Trim Panel \(76.13.26\)](#) (Section 501-05)
3. Remove the RH B-pillar upper trim panel. For additional information, refer to [B-Pillar Upper Trim Panel \(76.13.28\)](#) (Section 501-05)
4. Remove the RH C-pillar upper trim panel. For additional information, refer to [C-Pillar Upper Trim Panel \(76.13.35\)](#) (Section 501-05)
5. Remove the RH sun visor.
 - Remove the screw covers.
 - Remove the 2 screws.
 - Release and disconnect the electrical connector.

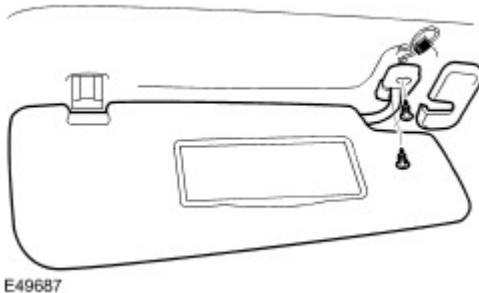


6. Remove the sun visor retaining clip.
 - Release the screw cover.
 - Remove the screw.




7. Remove the RH passenger assist handles.
 - Carefully release the 6 screw covers.

- Remove the 6 screws.

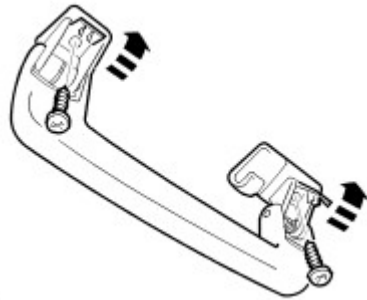


8. Release the RH side of the headliner.

- Release the 6 clips.

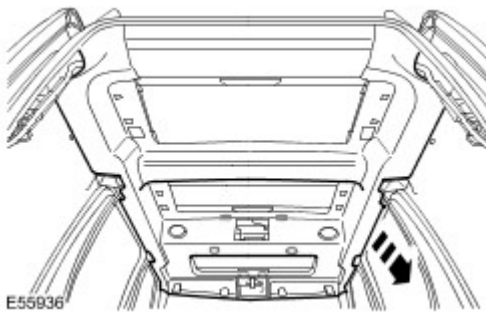

9. Remove the alarm antenna.

- Disconnect the electrical connector.
► Remove the 2 bolts.

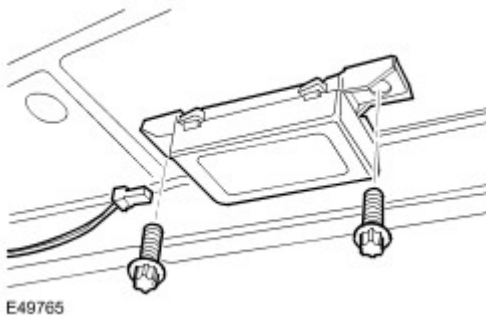

Installation

1. Install the alarm antenna.
- Connect the electrical connector.
 - Tighten the bolts to 10 Nm (7 lb.ft).
2. Secure the RH side of the headliner.
- Carefully secure the clips.

- 3 . Install the RH passenger assist handles.
 - Install the screws.
 - Install the screw covers.
- 4 . Install the sun visor retaining clip.
 - Install the screw.
 - Install the screw cover.
- 5 . Install the RH sun visor.
 - Connect and secure the electrical connector.
 - Install the screws.
 - Install the screw covers.
- 6 . Install the RH C-pillar upper trim panel. For additional information, refer to [C-Pillar Upper Trim Panel \(76.13.35\)](#) (Section 501-05)
- 7 . Install the RH B-pillar upper trim panel. For additional information, refer to [B-Pillar Upper Trim Panel \(76.13.28\)](#) (Section 501-05)
- 8 . Install the LH A-pillar upper trim panel. For additional information, refer to [A-Pillar Trim Panel \(76.13.26\)](#) (Section 501-05)
- 9 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)