


## Engine Cooling - TDV6 3.0L Diesel - Engine Cooling - Component Location

Description and Operation

Component Location - without Fuel Fired Burning Heater

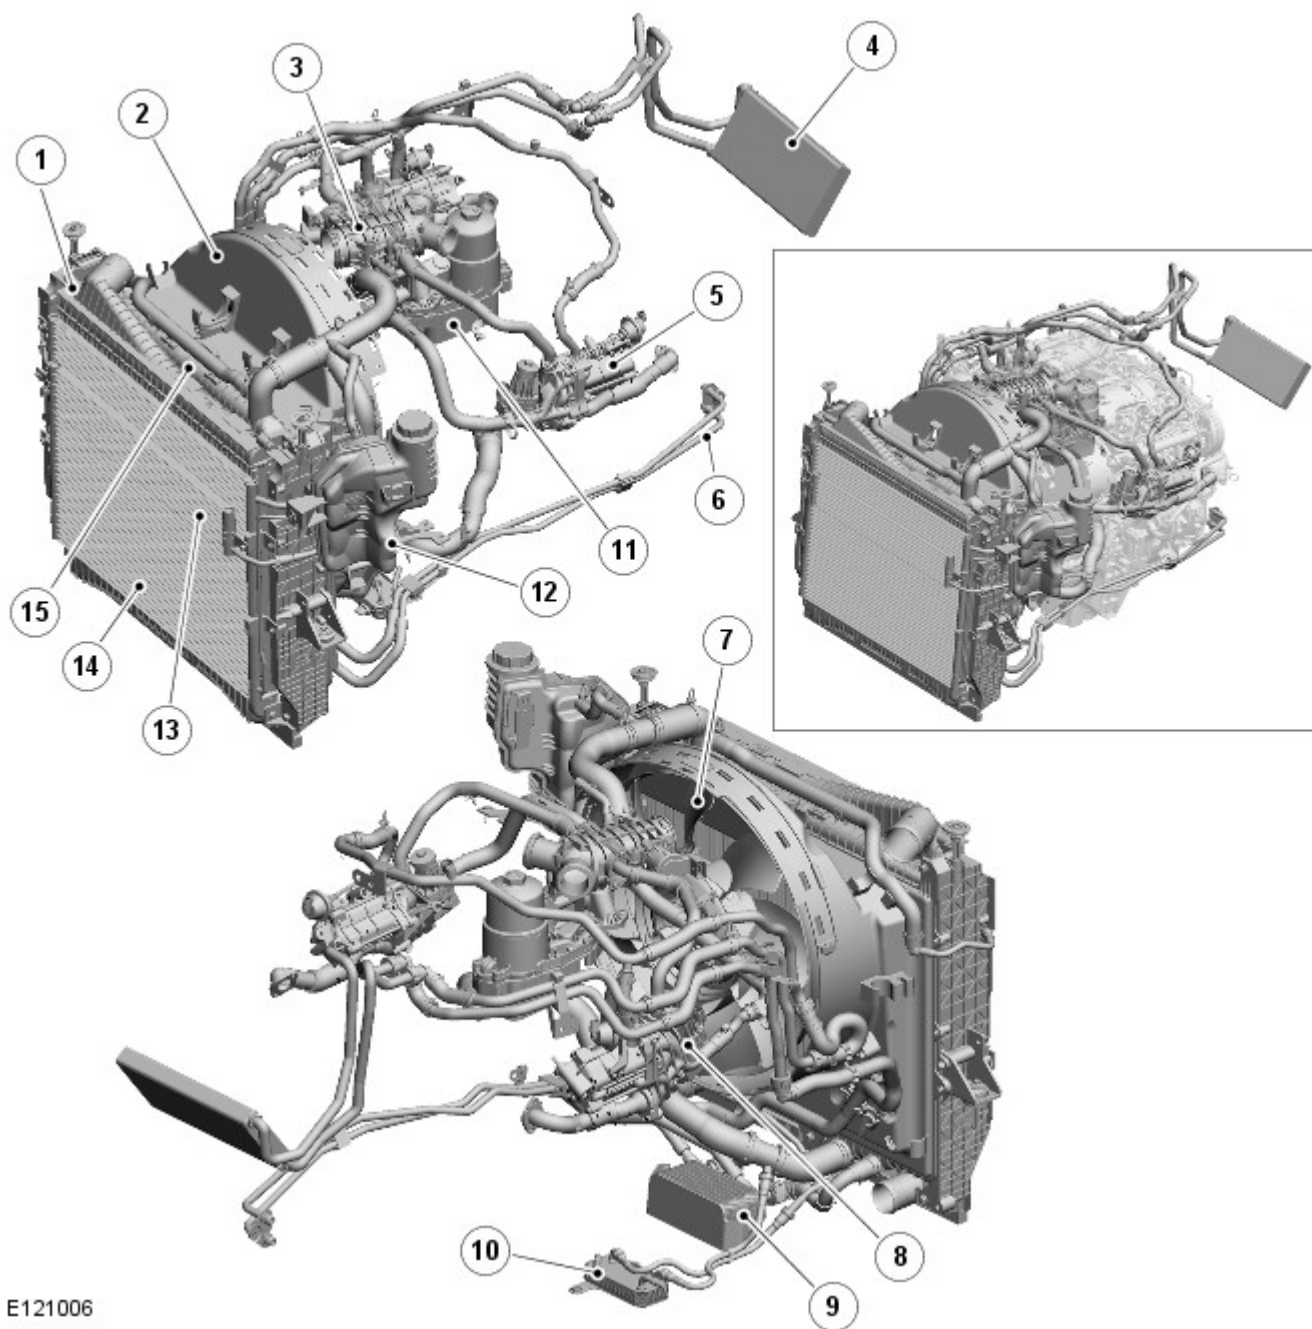


E121006

Item	Description
1	Intercooler
2	Fan cowl
3	Throttle body
4	Heater core
5	LH (left-hand) EGR (exhaust gas recirculation) cooler
6	Transmission oil cooler pipes
7	Viscous fan
8	RH (right-hand) EGR cooler
9	Transmission oil cooler
10	Fuel sub-cooler
11	Engine oil cooler

12	Expansion tank
13	Fuel cooler
14	Condenser
15	Radiator

Component Location - with Fuel Fired Burning Heater and Park Heating

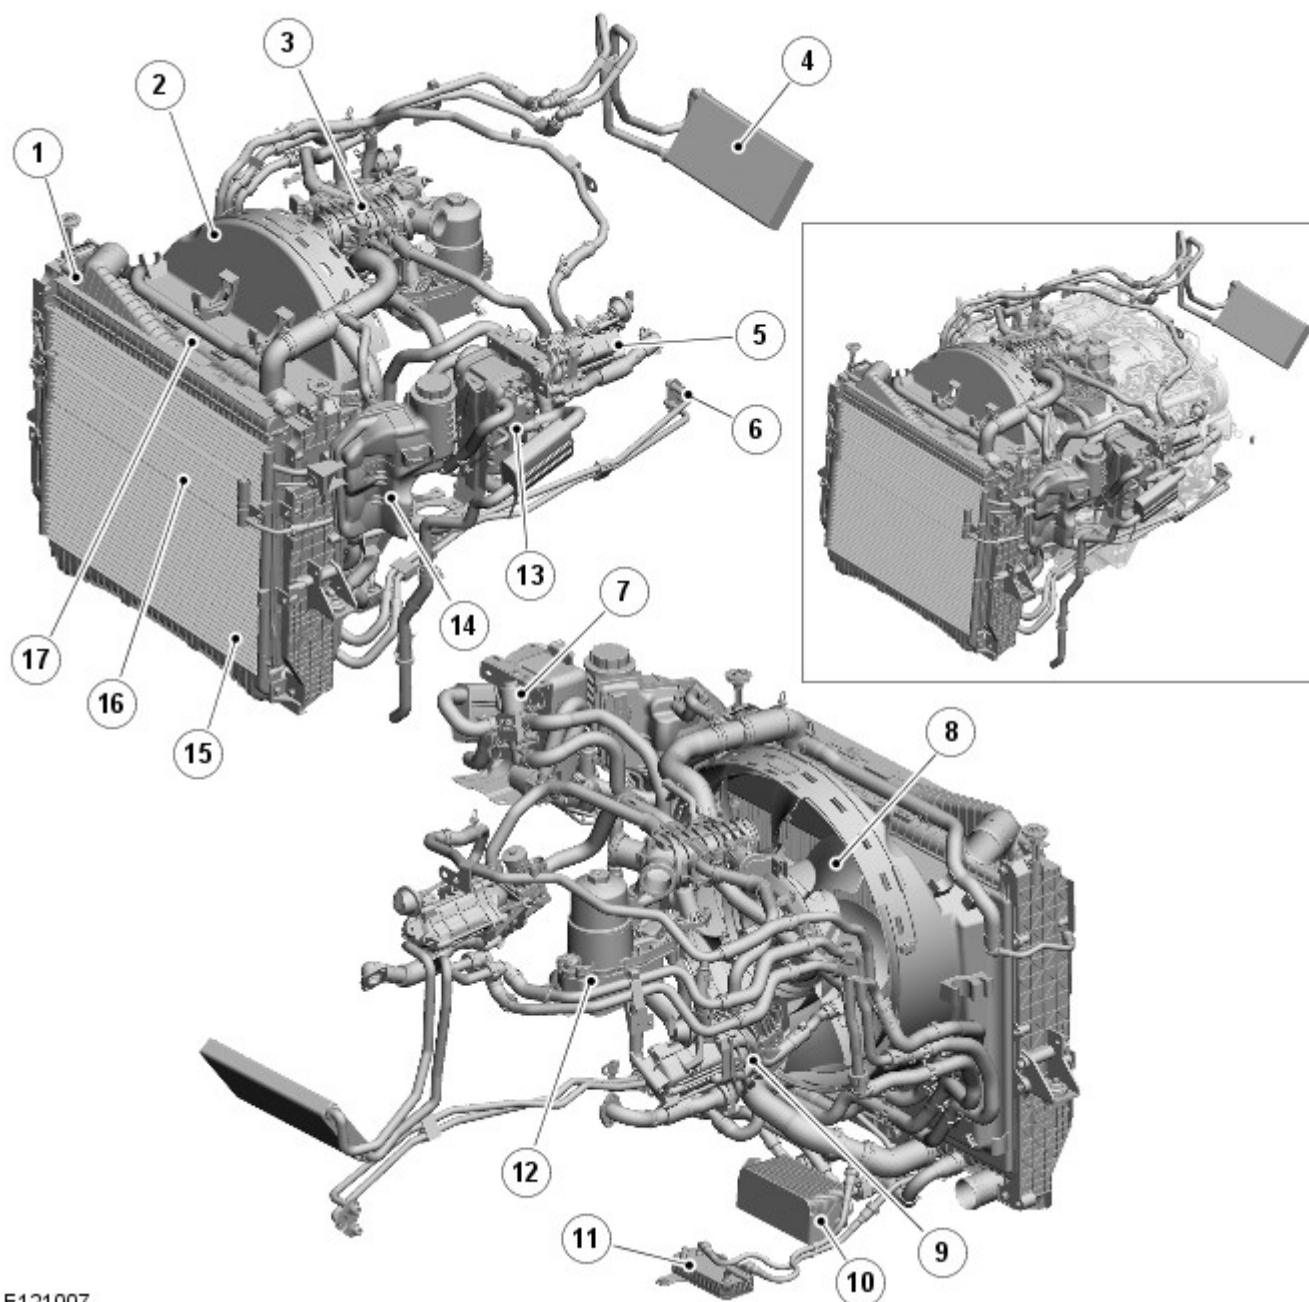

E121007

Item	Description
1	Intercooler
2	Fan cowl
3	Throttle body
4	Heater core
5	LH EGR cooler
6	Transmission oil cooler pipes
7	Park heating valve assembly
8	Viscous fan
9	RH EGR cooler
10	Transmission oil cooler

11	Fuel sub-cooler
12	Engine oil cooler
13	FFBH (fuel fired burning heater)
14	Expansion tank
15	Condenser
16	Fuel cooler
17	Radiator