





Roof Opening Panel (76.84.01)

Removal

1. Remove the headliner. For additional information, refer to [Headliner \(76.64.15\)](#) (Section 501-05 Interior Trim and Ornamentation)
2. Release the 4 drain hoses from the roof opening panel.
3. Disconnect the roof opening panel motor electrical connector.

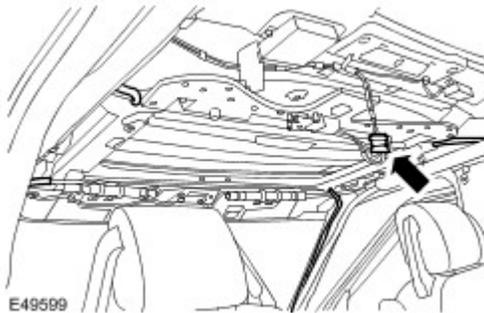

4. With assistance, remove the roof opening panel assembly.
▶ Remove the 11 bolts.

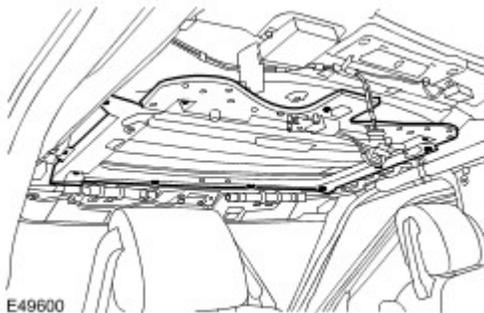

5.  **CAUTION: Do not depress the RH plunger to remove the blind.**

NOTE :

Do not disassemble further if the component is removed for access only.


NOTE :

Note the fitted position.


Remove the roof opening panel blind.

▶ Twist to release the handle.

▶ Depress the LH plunger.

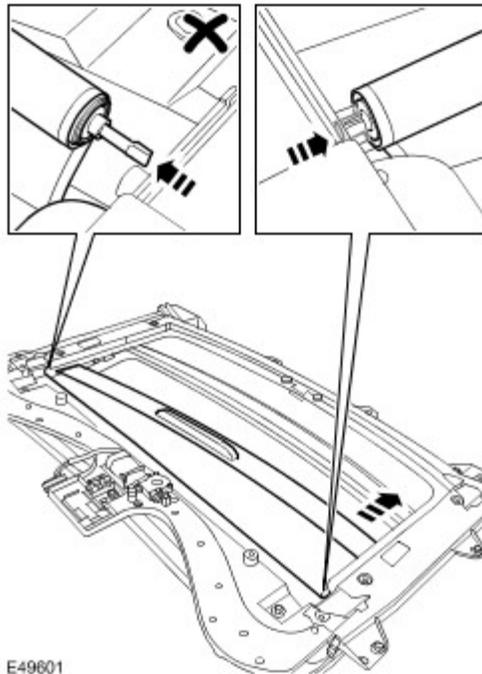

6. Remove the roof opening panel motor.
 - Remove the 3 Torx screws.
 - Remove the spacer.

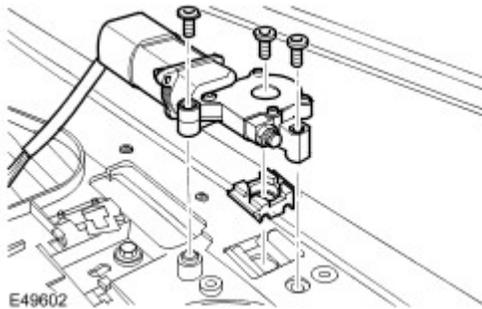

Installation

1. Install the roof opening panel motor.
 - Install the spacer.
 - Tighten the Torx screws to 4 Nm (3 lb.ft).
2. **NOTE :**
Align to the position noted on removal.
Install the roof opening panel blind.
 - Secure in the guides.
 - Locate the tensioner peg.
 - Depress the LH plunger.

- 3 . With assistance, install the roof opening panel assembly.
 - ▶ Clean the component mating faces.
 - ▶ Tighten the bolts to 10 Nm (7 lb.ft).
- 4 . Connect the roof opening panel motor electrical connector.
- 5 . Connect the drain hoses.
 - ▶ Make sure the drain hoses are clear prior to connection.
- 6 . Install the headliner. For additional information, refer to [Headliner \(76.64.15\)](#) (Section 501-05 Interior Trim and Ornamentation)
- 7 . Using T4, configure a new roof opening panel.
- 8 . If the battery has been disconnected, the one touch and anti-trap function will become inoperative. Close the roof opening panel and continue to hold the switch for a further 20 seconds to allow the sunroof to complete a full cycle. This will complete the roof opening panels calibration routine and reset these functions.