

Audio Amplifier (86.50.36)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the RH front seat. For additional information, refer to [Front Seat \(78.10.44/99\)](#) (Section 501-10)


3.



CAUTION: Cover fibre optic cable connectors to minimise dust ingress and avoid bending the cables in a radius of less than 30 mm.

Remove the amplifier.

- ▶ Remove the 4 bolts.
- ▶ Disconnect the 5 electrical connectors.

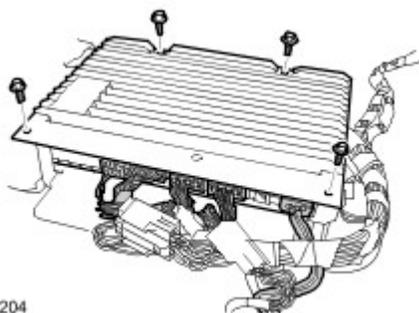

E54204

Installation

1. Install the amplifier.
 - ▶ Install the bolts and tighten to 10 Nm (7 lb.ft).
 - ▶ Connect and secure the electrical connectors.
2. Install the front seat. For additional information, refer to [Front Seat \(78.10.44/99\)](#) (Section 501-10)
3. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)