


INSTRUMENT PANEL AND CONSOLE

FLOOR CONSOLE UPPER SECTION (G1451975)

REMOVAL AND INSTALLATION

76.25.11	CONSOLE ASSEMBLY - FRONT - UPPER SECTION - RENEW	ALL DERIVATIVES	1.00	USED WITHINS	
----------	---	--------------------	------	--------------	--

REMOVAL


 **NOTES:**

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Make sure that the gear selector lever is in position N before removing any components.

The following step(s) applies to:

All vehicles

1.

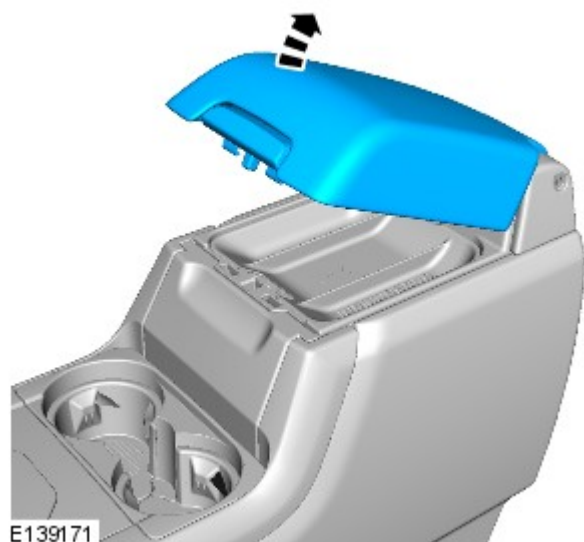


E139171

2.



E123731

3.

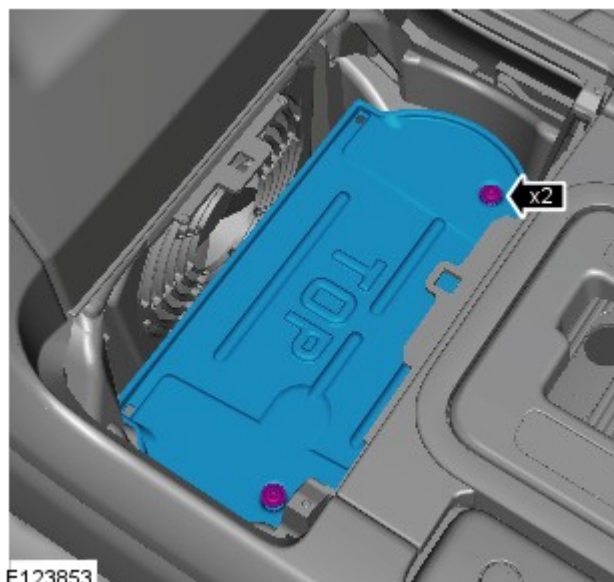


The following step(s) applies to:

Vehicles with 6 speed automatic transmission


4.



5.

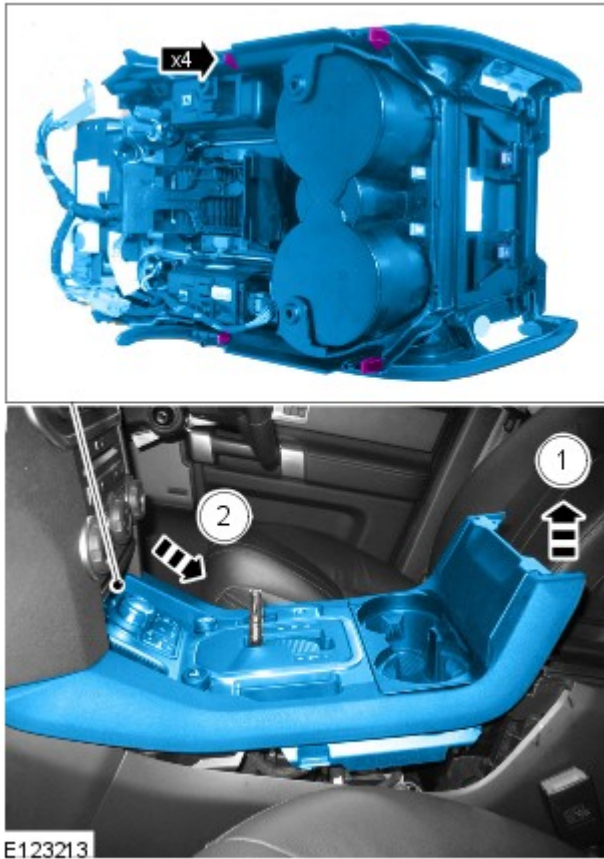


6.

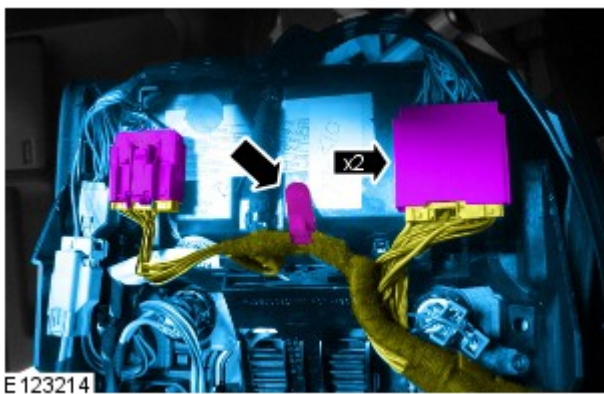

The following step(s) applies to:

Vehicles with 8 speed automatic transmission

7.

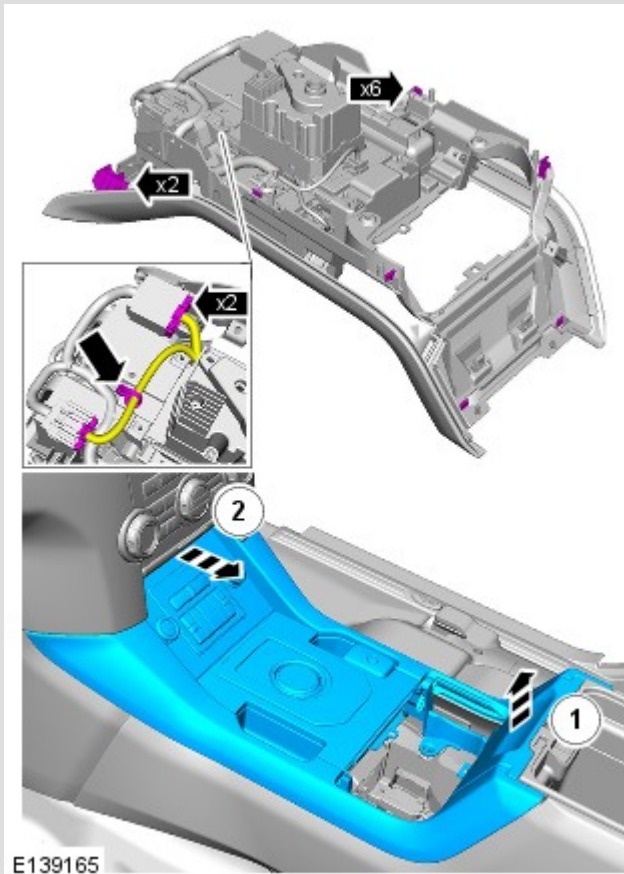


The following step(s) applies to:

All vehicles


8.

 **NOTE:**

Do not disassemble further if the component is removed for access only.

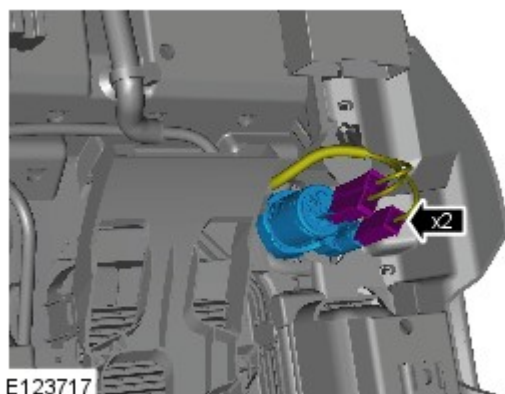


9.

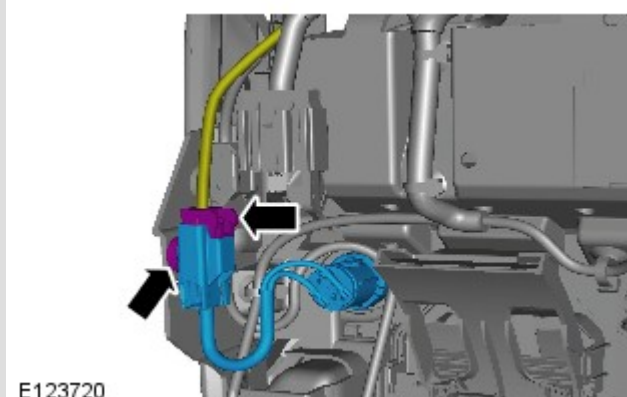


E123720

10.

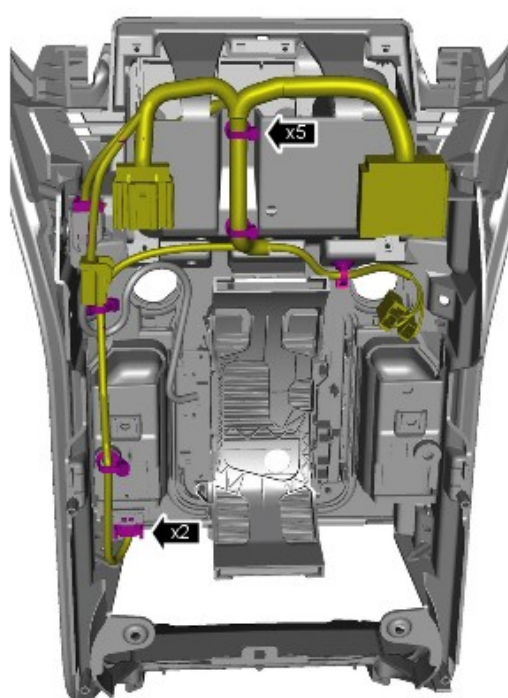


E123718

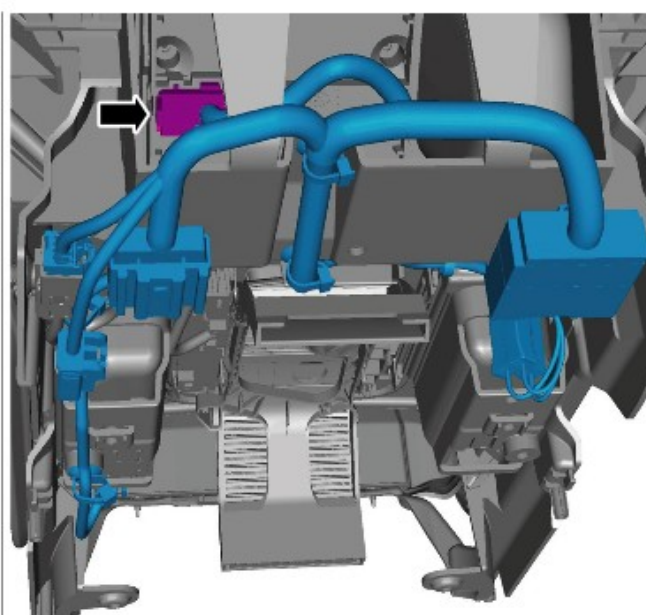

The following step(s) applies to:

Vehicles with 6 speed automatic transmission


11.

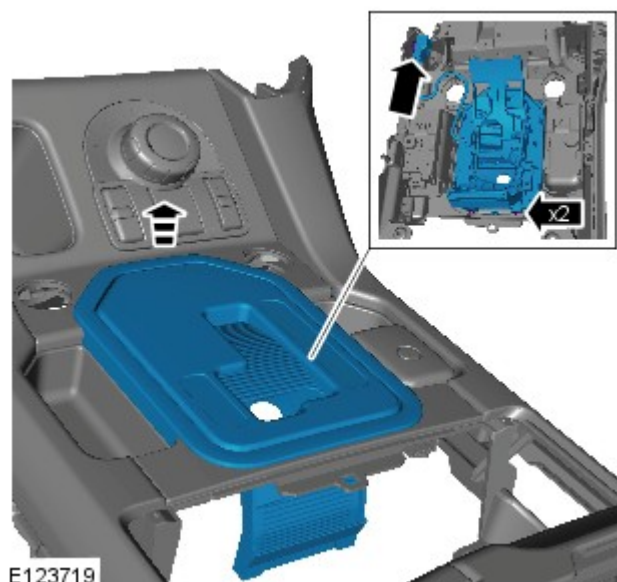


The following step(s) applies to:

Vehicles with 8 speed automatic transmission

12.

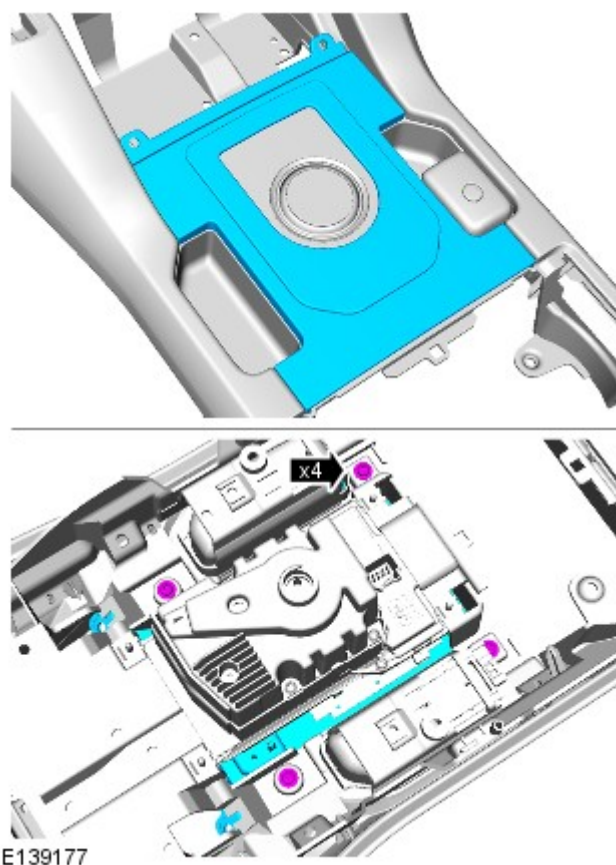


13.

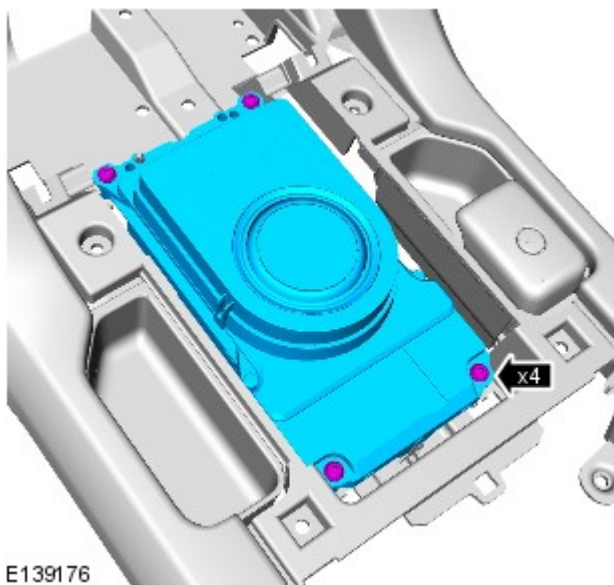


The following step(s) applies to:
All vehicles


14.

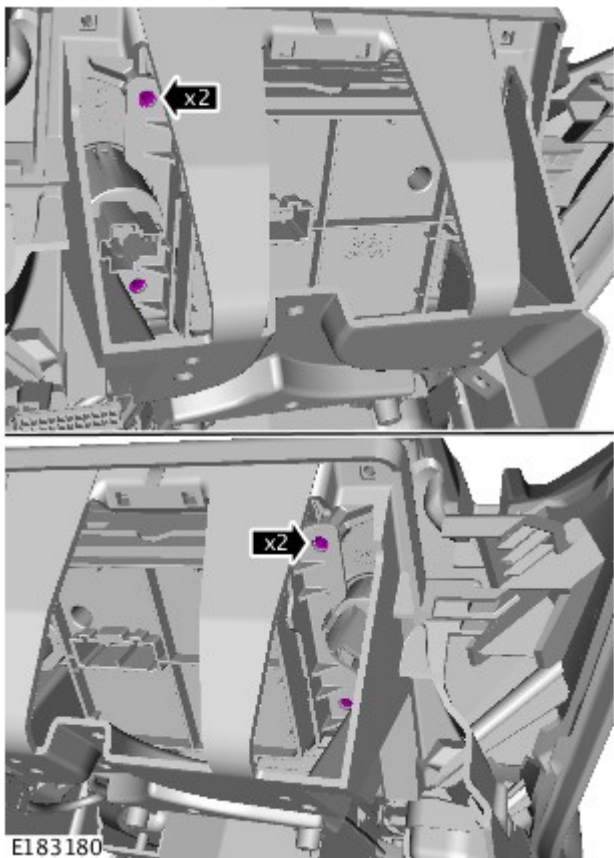


15.

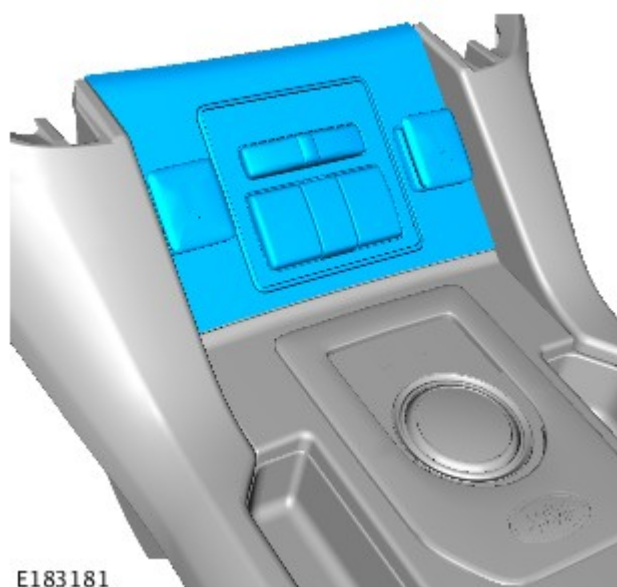

16.


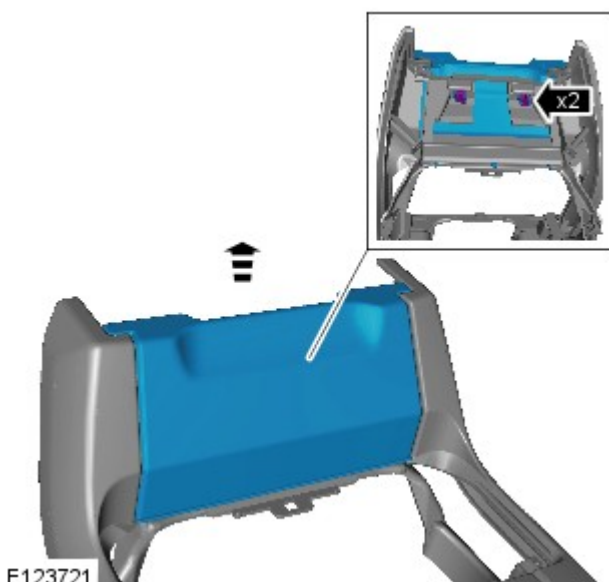


17.

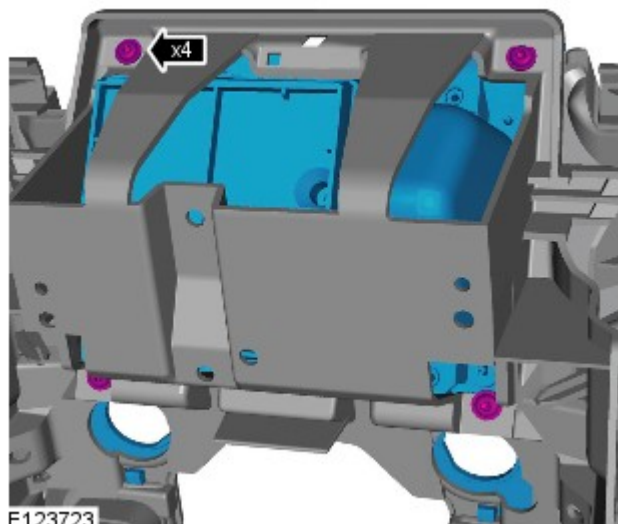


E123723

18.

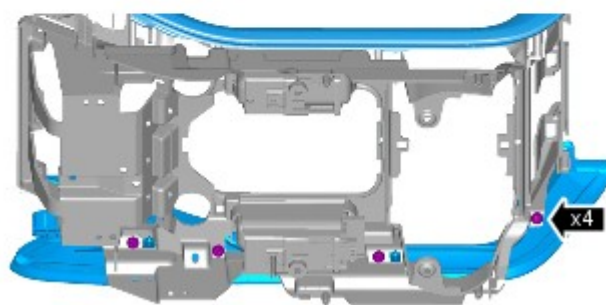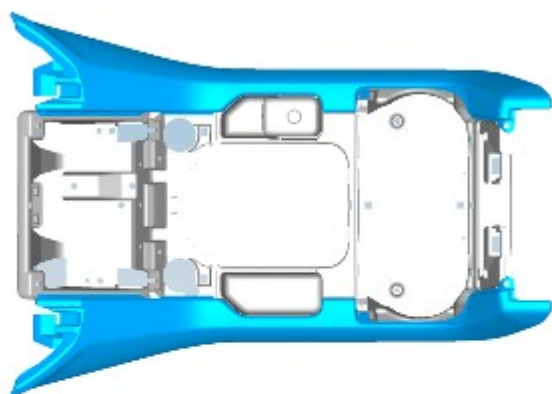


E129849

19.

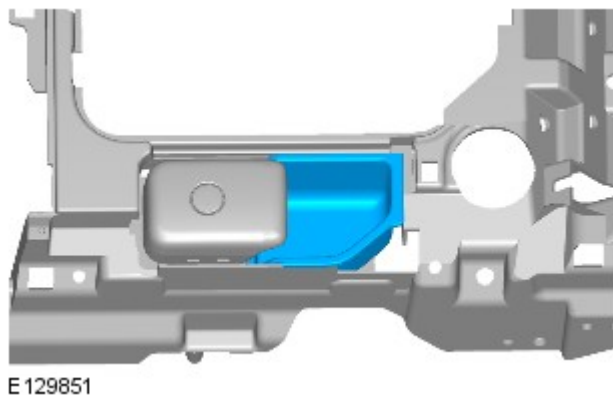

20.

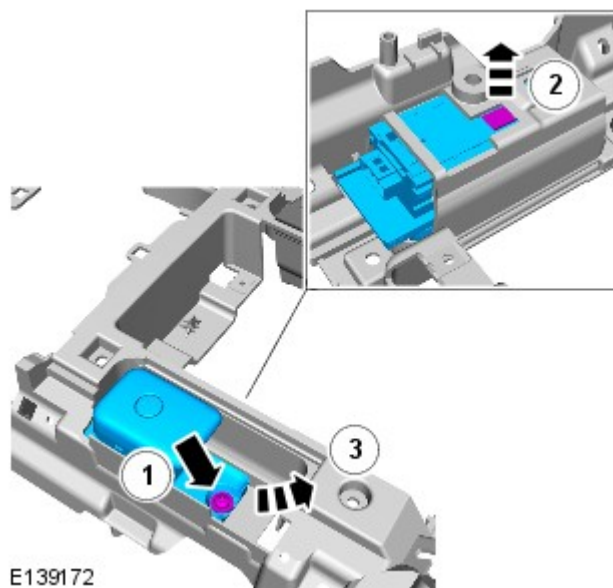

INSTALLATION

1. To install, reverse the removal procedure.