


CD Operation

Ejecting a single disc.

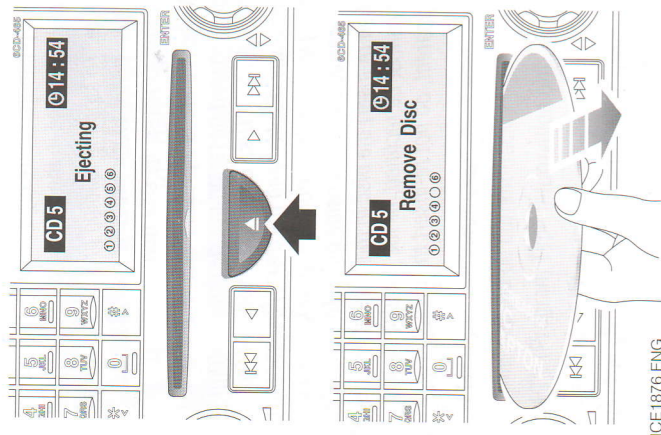


It is only possible to eject a single disc, if it is currently selected/playing.

To eject a disc, press the eject button briefly. 'Ejecting' will be shown on the display screen, and, after a short pause, the disc will be presented. When the disc has stopped moving 'Remove Disc' is displayed. The disc should now be removed.

Note: If the disc is not removed from the slot within fifteen seconds, it will be drawn back into the player.

Ejecting multiple discs.

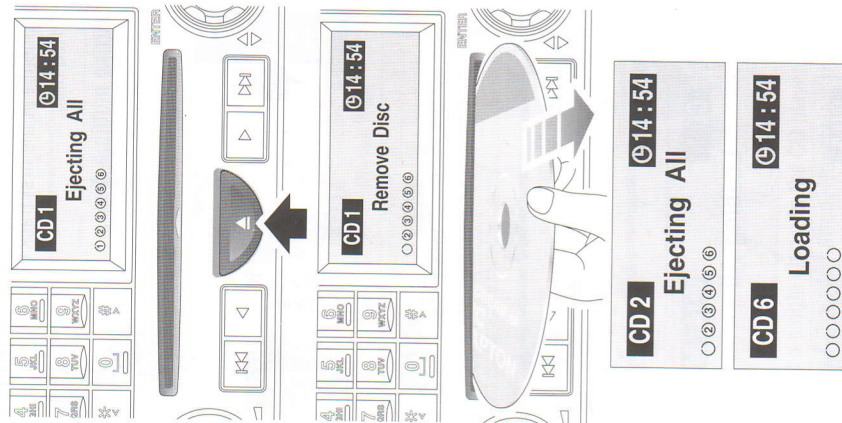

All of the discs contained in the player can be ejected in sequence. To eject all of the discs, press and hold the eject button.

The discs will be ejected one at a time with a short pause in between each. Following the removal of the last disc, 'Loading' will be shown in the display screen.


To stop the process, press any number key.

Note: If a disc is not removed from the slot within fifteen seconds, it will be drawn back into the player.

CD Operation

CD PLAYBACK

Play

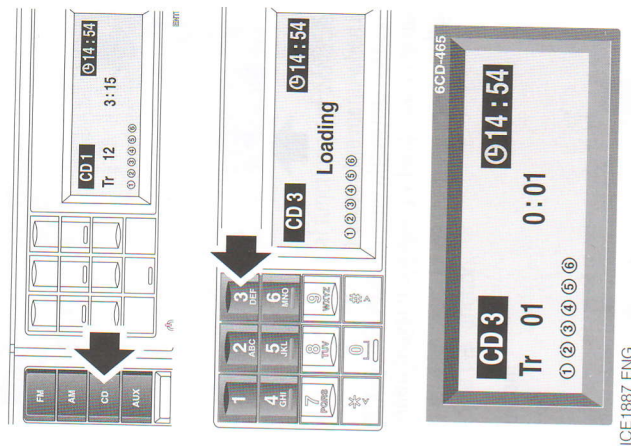

To start CD playback, briefly press the CD mode button, followed by the disc number required. If no disc number is selected, playback will begin at one of two places.

- If the discs contained in the player have not been removed since their last use, playback will begin from the point at which it was stopped previously.
- If the discs contained in the player have not been used since they were inserted, playback will begin at the start of disc one.

ICE1888 ENG

If the slot position selected does not contain a disc, there will be a pause followed by a message on the display screen 'Insert'. Once a disc has been inserted, there will be a pause whilst the unit reads the disc information. Playback will then begin at the start of track one.