

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

	Kilometers x 1000 Years Miles x 1000	Maintenance Interval – whichever occurs first (based on expected vehicle display).									
		26	52	78	104	130	156	182	208	234	260
		1	2	3	4	5	6	7	8	9	10
SERVICE											
Change engine oil and replace filter		•	•	•	•	•	•	•	•	•	•
VEHICLE INTERIOR											
Reset the Service Interval Indicator		•	•	•	•	•	•	•	•	•	•
Reset engine oil level indicator		•	•	•	•	•	•	•	•	•	•
Check operation of all lights, warning indicators and horn		•	•	•	•	•	•	•	•	•	•
Check operation of front/rear wiper washer systems		•	•	•	•	•	•	•	•	•	•
Check condition and security of seats and seat belts		•	•	•	•	•	•	•	•	•	•
Replace pollen filter		•	•	•	•	•	•	•	•	•	•
Replace climate controlled seat cushion motor filters (if equipped)			•		•		•		•		•
VEHICLE EXTERIOR											
Check condition of wiper blades		•	•	•	•	•	•	•	•	•	•
Check operation of all door checks, hood latch, and fuel flap; lubricate door checks			•		•		•		•		•
ENGINE COMPARTMENT											
Check battery condition; check / top up electrolyte level		•	•	•	•	•	•	•	•	•	•
Check / top up fluid levels (brake, coolant, windshield washer)		•	•	•	•	•	•	•	•	•	•
Check specific gravity of coolant			•		•		•		•		•
Check condition of accessory drive belt(s)		•	•	•	•	•	•	•	•	•	•
Change brake fluid: every 3 years		•	•	•	•	•	•	•	•	•	•
Change engine coolant: every 10 years											•
Replace spark plugs											Every 156,000 kilometers
Replace air cleaner element					•				•		

	Miles x 1000 Years Kilometers x 1000	Maintenance Interval – whichever occurs first (based on expected vehicle display).									
		16	32	48	64	80	96	112	128	144	160
		1	2	3	4	5	6	7	8	9	10
SERVICE											
ENGINE COMPARTMENT (CONTINUED)											
Replace accessory drive belt: every 10 years											•
VEHICLE UNDERBODY											
NOTE: Remove all road wheels before inspecting brake components.											
Inspect brake pads for wear, calipers for leaks, and discs for condition		•	•	•	•	•	•	•	•	•	•
Check operation of electronic parking brake		•	•	•	•	•	•	•	•	•	•
Inspect tire pressures, condition, and tread depth		•	•	•	•	•	•	•	•	•	•
Inspect exhaust system for leaks, security and damage			•		•		•		•		•
Inspect for fluid leaks			•		•		•		•		•
Inspect condition of driveshafts, suspension, and steering boots/gaiters			•		•		•		•		•
Inspect steering rod ball joint fixings and condition of ball joints, dust covers, and EPAS water drain valve			•		•		•		•		•
Inspect fuel, brake, hydraulic, and fluid pipes, hoses and unions			•		•		•		•		•
Inspect electrical harnesses, routing and connections			•		•		•		•		•
Check for free play in all suspension and body mounting bushings			•		•		•		•		•
Lubricate wheel spigot bore with anti-seize compound; install road wheels to opposite side of same axle (except unidirectional tires, which install on same side)		•	•	•	•	•	•	•	•	•	•
Replace all flexible brake hoses: every 6 years							•				
Change transmission fluid and filter											Every 9 years
Change front and rear axle oil (non-locking differential)											Every 10 years
Change rear locking differential oil							•				•
Change transfer box oil; replace drain and fill plugs and washers							•				•
Conduct road test; select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears		•	•	•	•	•	•	•	•	•	•
If fault lamps are illuminated, interrogate with IDS/SDD and report findings		•	•	•	•	•	•	•	•	•	•
Check for any outstanding Recalls or Service Actions		•	•	•	•	•	•	•	•	•	•