

## ProSpeed Discovery 3 and 4 Rear Ladder (221252) Fitting Instructions

### Kit Contents:

- 1x rear ladder
- 1x length of helicopter tape
- 2x repair washer
- 2x hex head bolt
- 2x rubber nut with washer

### Tools Required:

- 10mm socket
- No. 2 pozi drive
- Plastic pry bar
- Torx T30
- Drill
- 12mm drill bit



### Instructions:

1. Remove the screw currently securing the internal boot handle.




2. Remove the trim around the upper tailgate latch.



3. Remove the interior plastic panel that runs along the rear door.
4. Disconnect the number plate light switch
5. Undo the four bolts and three nuts currently holding the plastic panel above the number plate.



6. Remove the two plastic clips from the panel. Do NOT shut the boot once the handle has been removed.

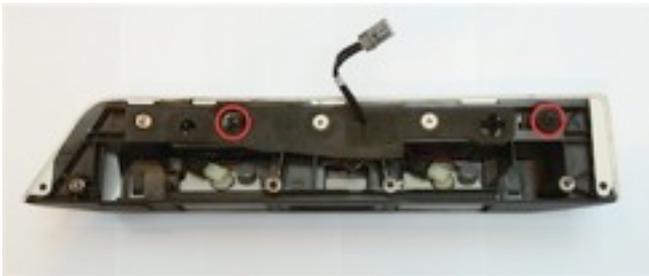

7. Re-drill the holes in the tailgate that were previously used for the retainer clips. Use a 12mm drill bit. Also drill up through the right hand side hole to make enough clearance for the rubber nut. Then insert the rubber nuts.



8. Clean off the surfaces ready for mounting the ladder.

9. Place the helicopter tape on top of rear door where the lip on the ladders top step will sit once in position.



10. Remove the backing from the double sided tape underneath the top step of the ladder.
11. Hook the ladder over the rear door ensuring the ladder is pulled as far backwards as possible before allowing it to stick down into place. Ensure the rear door is seated all the way into the lip then lower it down.



12. Fasten into place using the two hex head bolts each with a washer. Before fully tightening the two bolts check to make sure the ladder is aligned with the lower holes.  
TIP - It would be sensible to apply copper grease to the fasteners to aid removal later.



13. Fit the plastic panel back into place above the number plate.
14. Re-connect the light switch.
15. Finally, re-fit the interior door panel.